User information for TX-300V with PTT and VOX

- Transmitters with integrated PTT function are marked as follows on the transmitter housing:
  TX300V WITH PTT MODULE

- Transmitters with integrated PTT and VOX function are marked as follows on the transmitter housing:
  TX300V WITH VOX AND PTT MODULE

Application of PTT module

Application of VOX module

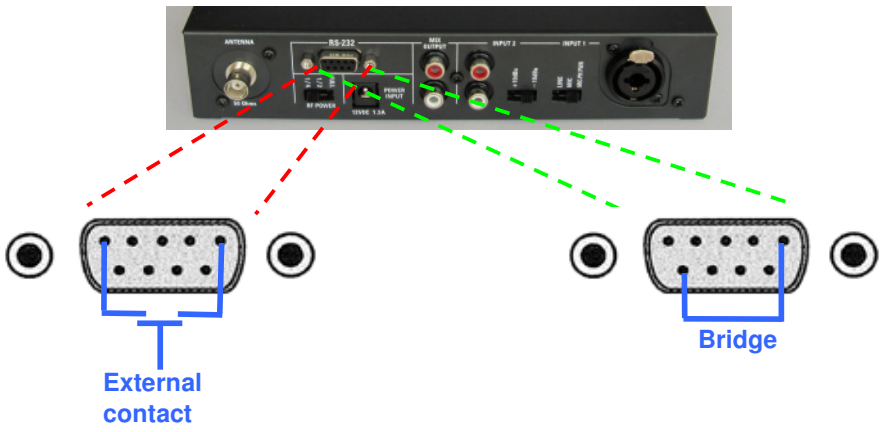

Only applicable with integrated PTT module

- The PTT function is always active independently of the microphone input signal
- Open external contact:
  the transmission is deactivated
- Closed external contact:
  the transmission is activated
- Transmitter with integrated VOX module:
  the VOX function is deactivated

Only applicable with integrated VOX module

- VOX function is activated
- Transmission is activated by the incoming microphone signal
- Transmission activation is dependent on the VOX triggering level
- If you experience any problems with transmission activation, please contact us on info@phonak-communications.com